

QUICK GUIDE & ROAD MAP






REV | #2.1



Manual for download and support
WWW.LBALTIMETERS.COM

MAIN WINDOWS

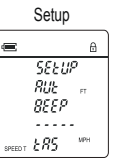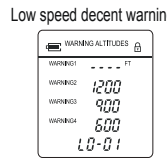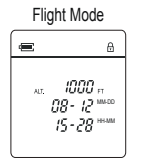

Perform ACCESS*

Perform ACCESS*

Perform ACCESS*



Perform ACCESS*

Perform ACCESS*



















Perform ACCESS*

Perform ACCESS*

Perform ACCESS*

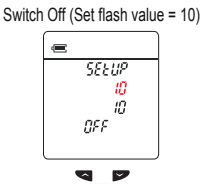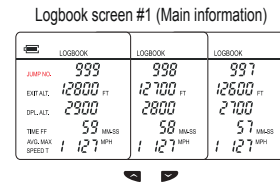

To avoid any unintentional changes, all settings are "locked" behind an ACCESS procedure. Access* is required to unlock and change any settings

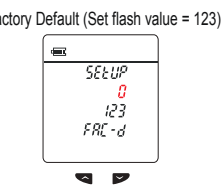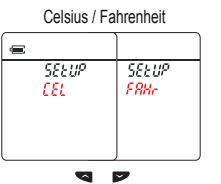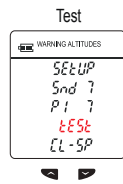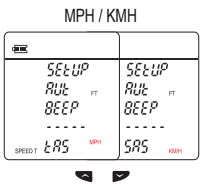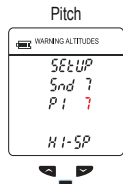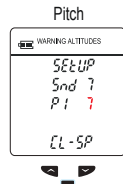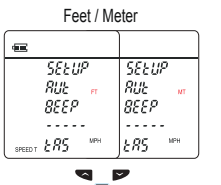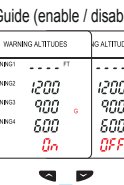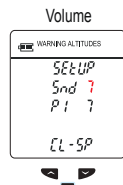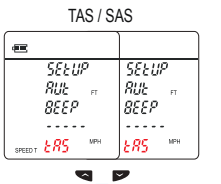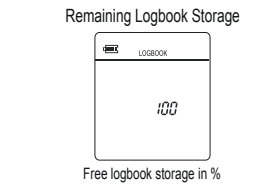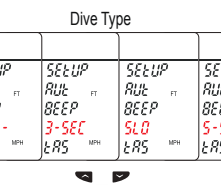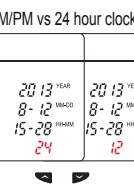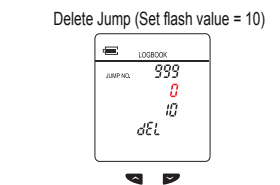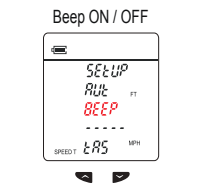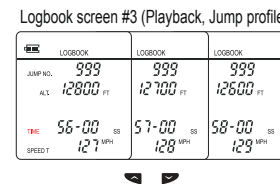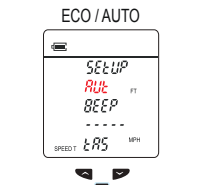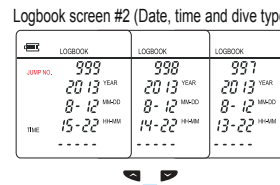

*Performing ACCESS

1. Press **⏏** and quickly release – **🔒** padlock icon turns OFF (disappears)
2. When **🔒** padlock icon appears again, immediately press **⏏** and hold pressed – **🔒** padlock icon will disappear
3. When **🔒** padlock icon appears again, immediately release **⏏**


Note: The PROTRACK2 goes out of ACCESS and back to the Main Window if no button has been pressed within 60 sec. ALL functions (except Power ON) can be performed ONLY when the PROTRACK2 is in ACCESS mode.

Power ON (after Power OFF)
The PROTRACK2 has been powered OFF prior to shipping from our factory. To turn the power ON, press and hold any key until the unit beeps, then release the key.

PROTRACK II QUICK GUIDE

Rev. 2.1

Power OFF

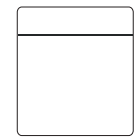

In "Ground Mode" and if "ECO Mode" is enabled, the PROTRACK II automatically switches OFF 14 hours after the last jump or 14 hours after pressing any key, whichever comes last.

The PROTRACK II can also be manually powered OFF from the Setup Window, to further extend the battery life when not in use.

Note: When switched OFF the PROTRACK II cannot be used for jumping. Customer settings are not lost when switched OFF.

Power ON

The PROTRACK II has been powered OFF prior to shipping from our factory. To turn the power ON, press and hold any key until the unit beeps, then release the key.

The PROTRACK II runs a self-test and sounds three beeps as it flashes the screen two times. It then displays a "Device Info" screen.



Device Info screen showing: Battery capacity in mVolt (6400), Barometric Pressure in mbar (hPa) (10.13), Temperature (Celsius or Fahrenheit) (27), Free logbook storage in % (100), Firmware Version (01-00).

*Ground Mode.


To save battery power, after power up and shortly after landing the PROTRACK II enters "Ground mode". In this mode, 60 seconds after last button pressed, the screen display will switch OFF. However, the PROTRACK II is still ready for jumping.

**Flight Mode

Shortly after takeoff the PROTRACK II switches to "Flight Mode" and displays the "Flight Mode" window. At the lowest preset "Climb to Altitude" (factory preset to 1,000 feet), the PROTRACK II sounds a sequence of beeps. These beeps have two functions:

1. The beeps indicate that the PROTRACK II has calibrated itself to the local ground elevation and is ready to jump.
2. The number of beeps indicates the altitude at which the high speed warning alarm is set; for example: If set to 4,500 feet, the signal will sound: beep-beep-beep-beep-(pause)-beep. The number of rapid-sequence of beeps indicates the highest warning altitude in thousands of feet. The beep after a pause (if any), signifies a 500-foot altitude increment. Should the battery voltage of the PROTRACK II show low capacity, the beep sequence is followed by 5 short beeps. This indicates that the batteries should be replaced.

MAIN WINDOWS

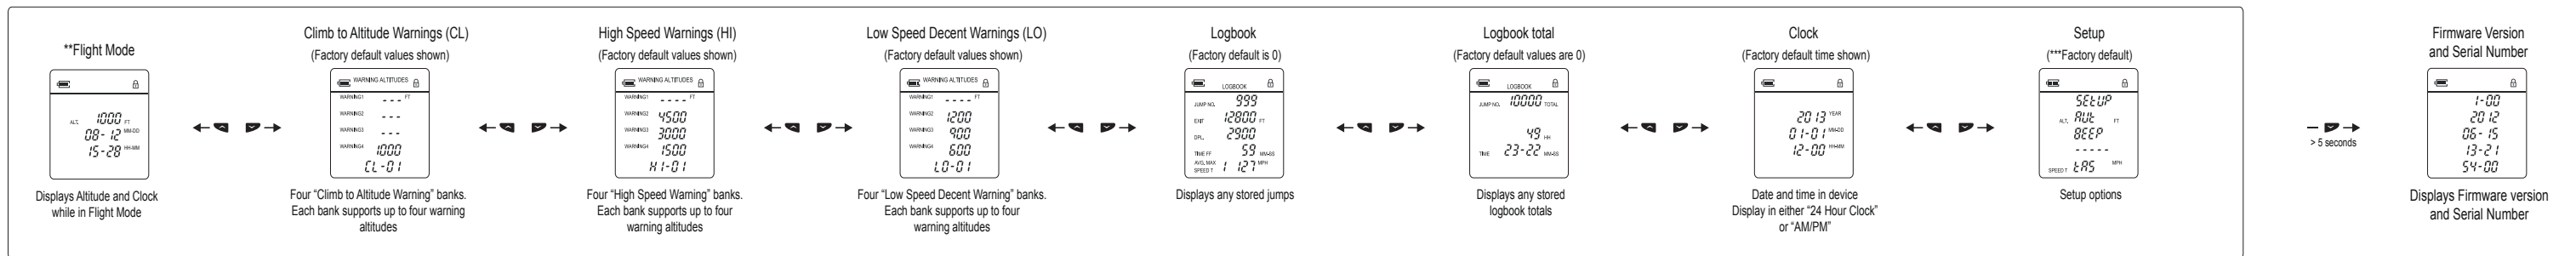

To avoid any unintentionally changes in settings, all settings are "locked" behind an ACCESS procedure. Access* is required to unlock and change any settings

Performing ACCESS

1. Press [M] and quickly release – [P] padlock icon turns OFF (disappears)
2. When [P] padlock icon appears again, immediately press [M] and keep it pressed – [P] padlock icon will disappear
3. When [P] padlock icon appears again, immediately release [M]

Note: The PROTRACK II goes out of ACCESS and back to the Main Window if no button has been pressed within 30 sec. all functions (except Power ON) can be performed ONLY when the PROTRACK II is in ACCESS mode.

After performing ACCESS the following options are available to the corresponding Main Window

Altitude Offset
- change altitude

Climb to Altitude Warning options:
- Select bank
- Set or disable warnings
- Set volume
- Set pitch
- Hear selected warnings, volume and pitch

High Speed Warnings Options:
- Select bank
- Set or disable warnings
- Set volume
- Set pitch
- Hear selected warnings, volume and pitch

Low Speed Warnings Options:
- Select bank
- Set or disable warnings
- Set volume
- Set pitch
- Hear selected warnings, volume and pitch

Logbook Options:
Logbook Screen # 1
· Jump number
· Exit altitude
· Deployment altitude
· Freefall time
· Speeds (Scrolls through AVG, MAX, 1st and 2nd Half)

Press [M] to view Logbook Screen # 2
· Jump number
· Year for the jump
· Month and date for the jump
· Hours and minutes for the jump
· Dive Type

Press [M] to view Logbook Screen # 3
- Jump Number
- Altitude at time
- Freefall and canopy status
- Time after exit in seconds
- Speed at time

Press [M] to "Delete last Jump" window

Press [M] to view "Remaining Logbook Storage" window

Logbook Total Options:
- Set total number of Jumps
- Set total hours
- Set total minutes
- Set total seconds
- Delete complete logbook

Caution:
Once the PROTRACK II logbook is deleted there is no way to restore the information.
View "Remaining Logbook Storage"

Clock Options:
- Set Year
- Set Month
- Set Day
- Set "24 Hour Clock" or "AM/PM"
- Set Hour
- Set Minutes

Setup options: (**Factory default)
- Power OFF
- AUT / ECO AUT
- Beep ON / OFF ON
- Dive Type**** - - - - (Normal)
- TAS / SAS TAS
- Feet / Meters Feet
- MPH / KM/H MPH
- Celsius / Fahrenheit Celsius
- Reset to Factory Default


**** Dive Type, 3-SEC
In 3-SEC mode the descent rate parameters are more sensitive, allowing detection of short freefall (> 3 sec. freefall) for logbook exit generation.
See manual for important notes.

**** Dive Type, SLO (Slow)
In SLO mode the deployment parameters are more sensitive. Supports slow falling types of dives, like normal wing suits dives etc.

**** Dive Type, S-SLO (Super Slow)
In S-SLO the exit and deployment parameters are more sensitive. This mode is for very slow wing suit dives, fast canopy descents, Extreme Relative Work (XWR) etc.
All "High Speed Warnings" are enabled regardless of the vertical airspeed at the preset altitude.

See manual for important notes.

USB Mode

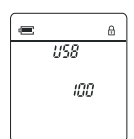

Free logbook storage in %

If a USB host device is connected to the PROTRACK II USB port, the PROTRACK II will act as a USB slave and show USB on the LCD display. Please visit www.LBAltimeters.com for applications that support PROTRACK II

ERROR Mode



Number Code

When the PROTRACK II detects a fault, an error ("ERR") sign, number and code are displayed. At the same time the unit beeps every minute.

All faults indicate that the PROTRACK II is defective. Remedy: Replace batteries or perform reset

If the unit does not function correctly even after replacing batteries and pressing reset, please contact your local dealer or LARSEN & BRUSGAARD.